

Recommended Trailer Maintenance Schedule



Item	Inspection Required	Each Trip	3 Mo. or 3,000 Mi.	6 Mo. or 6,000 Mi.	12 Mo. or 12,000 Mi.	Replacement Parts	Helpful Videos
Tires	Check tire pressure and tread wear	✓				Tires	
Lights	Check for proper light functions	✓				Trailer Lights	Trailer light kit install and test
Breakaway switch	Pull pin and test for proper function	✓				Breakaway kits	Breakaway install kit and test
Breakaway battery	Check battery charge level	✓				Breakaway batteries	
Trailer brakes	Test braking function and performance	✓				Trailer brakes	
Lug nuts (wheel bolts)	Tighten to specified torque value		✓			Lug nuts and wheel bolts	How to torque trailer lug nuts
Brake adjustment	Test for proper drag (light drag) and adjust as needed			✓		Brake parts	
Wheels	Check for cracks or dents				✓	Wheels	How to inspect a trailer wheel
Hub and drum assemblies	Check for scoring or wear				✓	Hubs and drums	Hub and drum inspection
Wheel bearings	Repack bearings and check for damage or wear				✓	Bearings and races	How to repack bearings
Seals	Check for damage or leaks				✓	Seals	
Brake assemblies	Check internal parts for wear, leaks, or damage				✓	Brake assemblies	
Brake magnets	Check for wear and replace if surface is grooved or copper windings are exposed				✓	Brake magnets	Replacing a brake magnet
Hydraulic brakes	Bleed brakes and change brake fluid				✓	Brake bleeders	Brake bleeding
Springs	Check for broken or flattened springs				✓	Leaf springs	Slipper spring and double-eye spring replacement
Suspension	Check for worn or loose fasteners and shackle link wear				✓	Suspension parts	

Trailersnorthwest.com

Feel free to give our truck side a call we offer yearly maintenance service packages on trailers in our full service shop. We also do repairs, alterations, and customizations for trailers, along with selling most parts and accessories.